

Assembly Guide





If you have more questions regarding the assembly, disassembly or SIM replacement of the FieldStation, please feel free to contact us at support@doktar.com




Doktar App allows you to track Doktar's IoT devices from a single application.

Parts

Depending on the model you have, the sensor body parts may vary. The essential components are illustrated in the diagram below:

- 1 — Top module
- 2 — Bottom module
- 3 — Accessory box
- 4 — Assembly guide

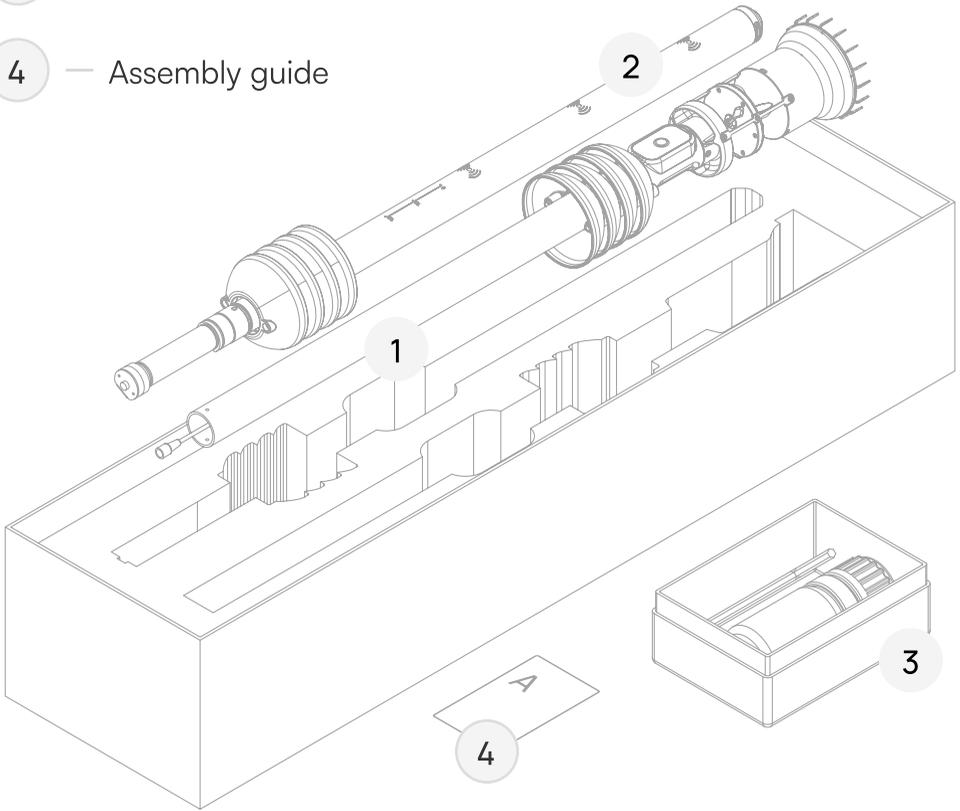


Assembly

The steps can be applied both for Standard and Pro.




Step 1

Carefully take the device out of its box

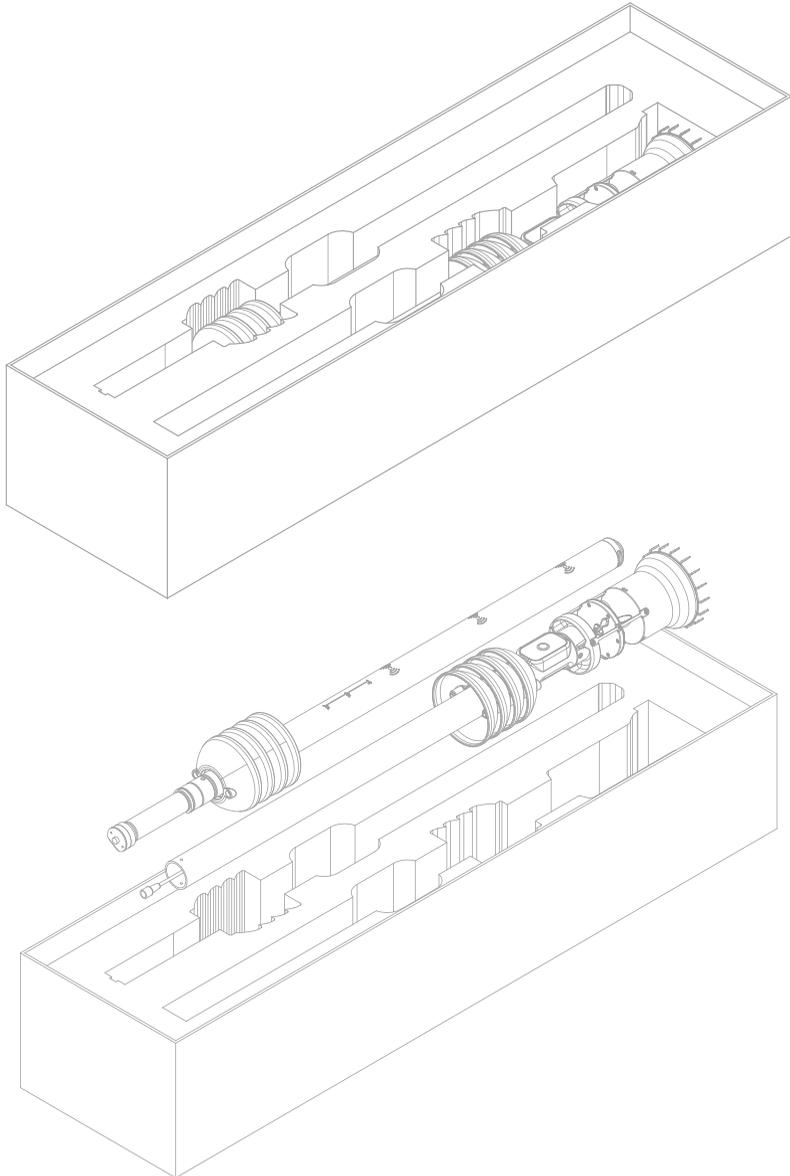


Step 2

Align top and bottom module as shown in the diagram

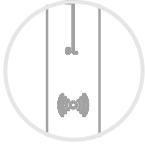



-  Make sure the control button and sensor marks are facing the same direction

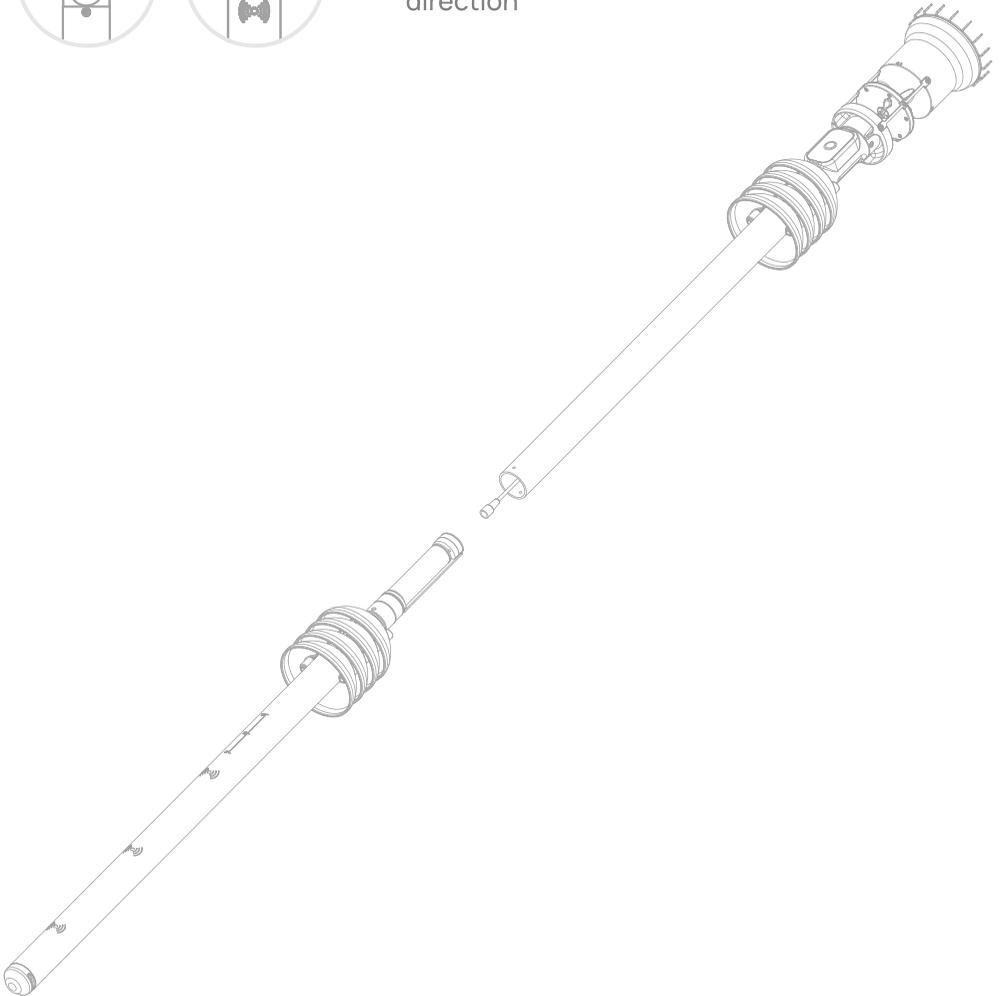

Step 3


Install cable hanging inside the tube to the connector on top of the bottom module

- ① Apply liquid silicon oil on shown areas of the gasket using the bottle provided with the box

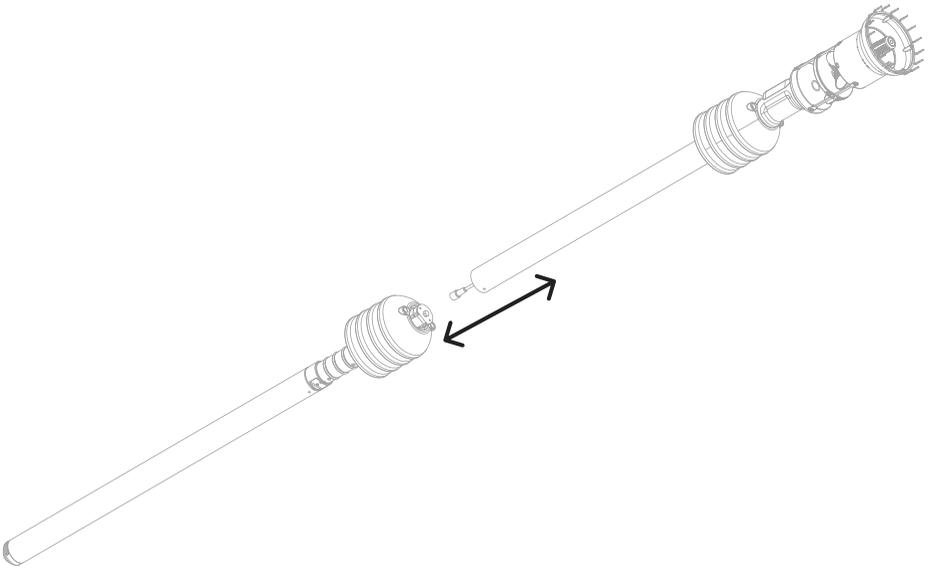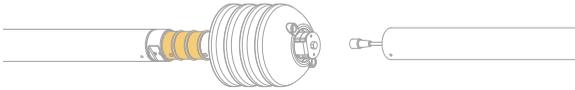

Step 4


Push modules firmly until they fit together

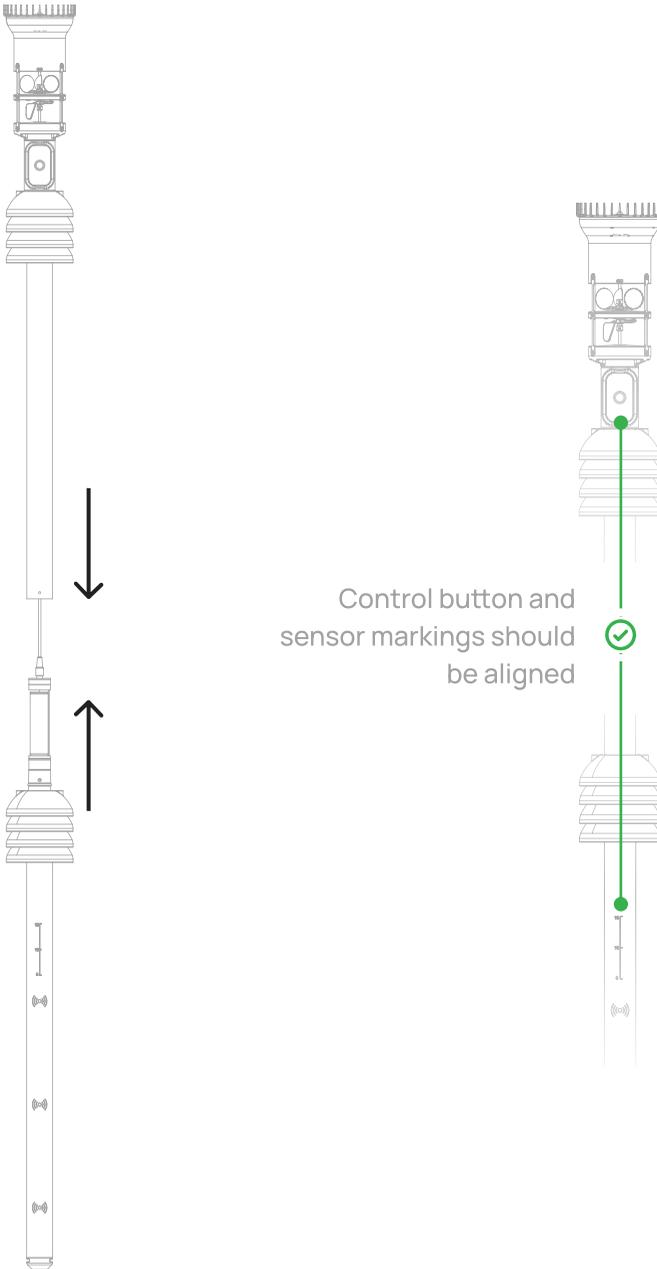


Step 5

Fasten the screws using the key provided until it stops moving. There are only two screws to be fastened.

 Make sure to not overtighten the screws.

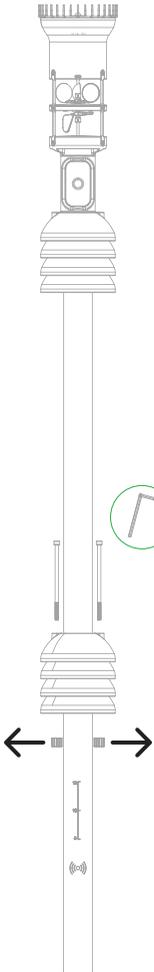


5.1

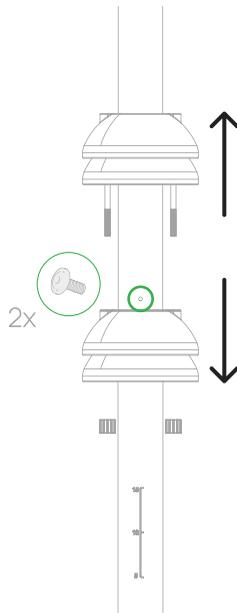

Split shades group in two parts to expose screw holes underneath

5.2

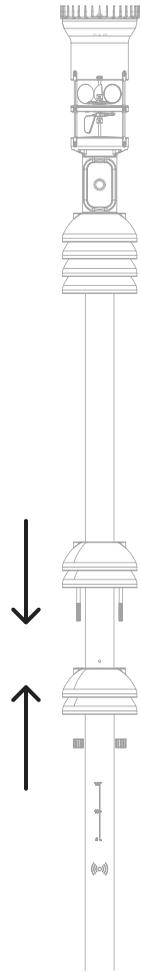

5.3

✓ Done

Your device is ready for the fields and endless monitoring!

